

OPERATOR'S MANUAL



NOTICE

ANY PICTURES CONTAINED WITHIN THIS OPERATOR'S MANUAL THAT
DEPICT SITUATIONS WITH SHIELDS, GUARDS, RAILS, OR LIDS REMOVED
ARE FOR DEMONSTRATION ONLY. HAGIE MANUFACTURING STRONGLY
URGES THE OPERATOR TO KEEP ALL SHIELDS AND SAFETY DEVICES IN
PLACE AT ALL TIMES.



**OPERATOR'S MANUAL
FOR
HAGIE BLADE STORM FLAIL MOWER**

HAGIE MANUFACTURING COMPANY

721 CENTRAL AVENUE WEST
BOX 273
CLARION, IOWA 50525-0273

(515) 532-2861

COVERS:FLAIL MOWER ATTACHMENT OPTION NUMBERS: U80107

11-09 493433

Blade Storm Flail Mower

Operator and Service Manual

1.	TO THE OWNER	1
2.	OPERATOR RESPONSIBILITIES	2
3.	SAFETY	3
	3.1. Warning symbols	3
	3.2. Safety instructions	4
	3.3. Risk factors	10
	3.4. Danger zones	10
	3.5. Warning symbols	10
4.	INTRODUCTION	17
	4.1. Dimensions	17
	4.2. Flail mowers	18
	4.3. Auxiliary oil cooler	18
	4.4. Quick couplers	19
	4.5. Hydraulic pumps	19
5.	OPERATION	20
	5.1. Preparing for operation	20
	5.2. Connecting the flail mower to the tractor	21
	5.3. Disconnecting the flail mower from the tractor	22
	5.4. Pre-operative inspections	23
	5.5. Operating the flail	25
	5.6. Unfolding the mower heads	27
	5.7. Using the flail controls	28
	5.8. Mowing with the flail	29
	5.9. Transporting the flail mower	30
6.	TIGHTENING TORQUES.....	31
7.	MAINTENANCE	32
	7.1. Maintenance precautions	32
	7.2. Daily maintenance checks.....	33
	7.3. Inner and outer lift base pivot points.....	34
	7.4. Adjusting the cutting height	35
	7.5. Greasing the cutter shaft	35
	7.6. Greasing the ground roller shaft.....	36
	7.7. Greasing the idler tension arms.....	36
	7.8. Idler tensioner.....	36
	7.9. Daily maintenance schedule.....	36
8.	TROUBLE SHOOTING	37
	8.1. Table 1	37
9.	PARTS	38
	FAX PAGES.....

Blade Storm Flail Mower
Operator and Service Manual

1. TO THE OWNER



TO THE OWNER

Thank you for choosing the Blade Storm flail mower!

This operator's manual is intended for both beginner and experienced operators. It is recommended that, before starting the machine, the operator read this operator's manual to master the efficient and economic use of the machine, even if the operator has worked with an equivalent machine previously.

The principles introduced in this manual apply to the use of this machine only. The persons responsible for airfield maintenance are also responsible for properly adapting these principles for practical use.


The information contained in this manual is based on the facts available at the time of its compilation. This manual is intended for operators of Blade Storm equipment only. Reproducing the manual in any form without prior authorization from Hagie is strictly prohibited.

Hagie Manufacturing Company reserves the right to make changes in the design and material of any subsequent piece of equipment without obligation to existing units.

We thank you for choosing Hagie and assure you of our continued interest in its satisfactory operation for you. If we might be of assistance to you, please call us.

We are proud to have you as a customer.

2. OPERATOR RESPONSIBILITIES

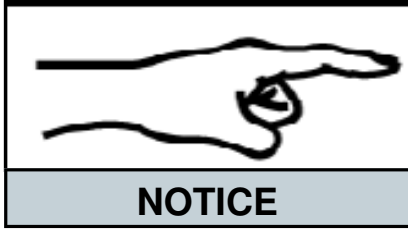

Before starting to use the machine, familiarize yourself with the contents of this manual, paying special attention to the SAFETY section, regardless of whether or not you have operated similar equipment.

The operator of the driving machine bears the responsibility for the maintenance and safe use of the equipment. To ensure proper and effective functioning of the machine, the instructions provided in this manual must be followed carefully. This is also required for the guarantee to be valid.

The safety instructions contain a summary of the instructions and rules that must be followed whenever working with the machine. However, these instructions do not replace the various statutory occupational and traffic safety requirements that may be in force on different sites.

Everything possible has been done to ensure that the information contained in this manual is correct and that the manual contains all necessary warnings. Neither Hagie Manufacturing nor its representatives assume any direct or indirect liability for damages caused by the information contained in this manual or lack of any warning issued therein or for any form of damage caused by the use of their tools or components.

Due to constant product development, Hagie Manufacturing reserves the right to alter any machine function or structure after the publication of this manual.

Keep this manual in a convenient place for easy reference when problems arise. This manual is considered a permanent fixture with this piece of equipment. In the event of resale, this manual should accompany the equipment. If you do not understand any part of the manual or require additional information, contact the Hagie Customer Service Department:

Hagie Manufacturing Company

721 Central Ave West

PO Box 273

Clarion, Iowa 50525

(515) 532-2861

www.hagie.com

3. SAFETY

3.1. Warning symbols

The following warning symbols are used in this manual to emphasize points of great importance, which are to be noted.

Imminent death/critical injury



Neglecting the safety measures may cause critical injury or death.

Serious injury or possible death/ equipment damage




Incorrect operation or servicing of the machine may cause damage to the machine or serious personal injury.

Possible injury/equipment damage



Incorrect operation or servicing of the machine may cause damage to the equipment. Possibility of injury.

Note

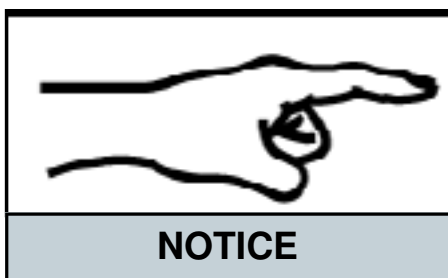

Pay attention to specific instructions.

3. SAFETY

3.2. Safety instructions



Read and familiarize yourself with all warnings and safety instructions specified in this manual.



The machine may not be operated, repaired or serviced by a person, who is unqualified, tired, ill or intoxicated.



The operator of the machine is always responsible for safety. The operator must have adequate training on the machine and its operation.



Keep a first-aid kit at hand at all times. Check the contents of the first-aid kit regularly and update the contents if necessary.



When moving, the machine may cause personal injury in the operating area. During operation, no person is to stay in the operating area, on top of, or on the steps or platforms of the machine.



Do not step between the coupling and the tractor when connecting.



Check that there are no persons under the equipment when lowering it.



Danger of clamping!

- Space between the coupling and the tractor



Never service or repair the machine alone.



When working under the machine, make sure that it is securely and safely supported. Danger of clamping!


3. SAFETY



Do not allow unauthorized persons inside the tractor cab when you are servicing the machine.



When making adjustments to the machine, adhere to the given instructions and settings. Appropriate use of the machine increases its service life.

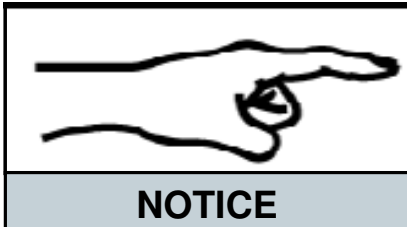

Always use original spare parts and components.



Keep in mind the following facts and hazards associated with high pressure hydraulics:

- Use protective clothing and goggles when servicing the hydraulic system.
- Escaping high-pressure oil may penetrate the skin and cause severe injuries and accidents. The oil spray can be very difficult to detect.
- Oil operating temperature can be very high.
- The hydraulic system must be depressurized before it can be opened. Before servicing, ensure that the attachment has been lowered and that the cylinder is in a static state.
- Clean all connections and components, and store the system free of impurities.
- Check the tightness of hose connections. Replace worn or damaged hoses. New hoses must meet the requirements set by Hagie Manufacturing.
- Do not discard oil into the environment!



If welding is necessary, take the following precautions:

- Remove the battery cables of the tractor before welding.
- Always use a welding mask and protective clothing.
- Be careful not to become part of the welding electrical circuit.
- Always keep fire-extinguishing equipment close at hand.
- Welding gases are hazardous to health; do not breath in the gases.

3. SAFETY



The operator and support personnel should wear hard hats, safety shoes, safety glasses, and proper hearing protection at all times for protection against injury including injury from items thrown by the equipment.



Do not modify or alter this equipment. Do not allow anyone else to modify or alter this equipment, any of its components, or its function.



Prolonged exposure to loud noise may cause permanent hearing loss!



Transport only at safe speeds. Do not operate the machine over recommended speeds or those recommended with the attachment equipment. Do not operate the machine over speeds in which you feel comfortable!



Routinely check all moving parts for wear and damage. Replace when necessary with only authorized parts. Look for anything that may be loose, broken, or missing.



KEEP AWAY FROM MOVING PARTS! To prevent entanglement, serious injury, or possible death, maintain a safe distance from moving parts. Do not wear loose fitting clothing that may be blown or sucked into moving parts.



Do not allow children to play on or around equipment!



Never operate the equipment while under the influence of alcohol or drugs. Do not allow someone else to operate the equipment if they are suspected to be under the influence of drugs or alcohol.



Mow in conditions where you have unobstructed visibility only. Do not mow in conditions where there is not enough light (natural or artificial) or in foggy conditions. If you can not clearly see 100 yards in front of you and to the sides of you do not operate the equipment.



This equipment is capable of throwing objects 100 yards! Do not operate the equipment if bystanders are within the safe operating zone!

3. SAFETY



All safety guards and devices must be in place while operating the equipment. Replace all missing or broken guards before operating the equipment.



The rotating part of this attachment have been designed for rugged use. However, the blades can fail upon impact with heavy, solid objects such as metal guard rails and concrete structures. Impact could cause the broken objects to be thrown outward at very high velocities. To reduce the possibility of property damage, serious injury, or death, never allow the cutting blades to come into contact with such obstacles.



Use extreme caution when operating near loose objects such as gravel, rocks, wire, or other debris. Inspect the area before mowing. Remove any hazards to prevent machine damage and bodily injury. Clearly mark any object that can not be removed so that it is easily avoidable by the operator. Stop mowing immediately if the cutting blades come into contact with a foreign object. Repair any damage and make certain the rotor or blade carrier is balanced before resuming mowing.



Do not operate the mower if contact has been made with items such as rope, wire, cable, or chains. These objects become entangled around the operating parts of the mowing head and then swing outside the housing at greater velocities than the cutting blades. This could be a very hazardous situation and could result in serious injury or death. Avoid such a situation by removing any hazard from the site before mowing.



Do not mow at speeds faster than what the attachment or machine is capable of. Do not mow at speeds faster than your ability to safely navigate the terrain.



Avoid mowing in reverse direction. Objects and people are not visible when operating the machine in reverse. If the machine must be operated in reverse direction, make sure that the area is clear of all obstacles and operate the machine at a slow speed.

3. SAFETY



Replace bent or broken blades with new ones. NEVER TRY TO WELD OR STRAIGHTEN A DAMAGED BLADE!



Do not put hand or feet under the mower decks. Contact with the cutting blades could result in a serious injury, dismemberment, or even death. Stay away until motion has stopped!



Do not operate the mower if excessive vibration exists. With the mower and the machine off, inspect the mower to determine the source of the vibration. Replace any missing blades immediately. Operating the mower with excessive vibration could result in component failure and broken objects being thrown out at high velocities.



Transport the attachment with it fully raised and the wings in the folded position. Make sure that they have been locked into place with the appropriate tools.



Do not allow the blades to turn while the wings are raised.



Never leave the attachment in the upright position while it is unattended. Accidental hydraulic failure may cause a sudden drop of the wings creating a potential injury or death by crushing.



Relieve hydraulic pressure before doing any service or maintenance to the attachment. Do not allow a person under a folded wing unless it is locked up or supported.



Do not approach an attachment unless the machine is turned off and all motion has stopped.



Be aware of your surroundings when lowering the wings. Make sure that there are no bystanders that could potentially be hit with the wing during the unfolding process. Make sure that there is enough clearance when unfolding near a building or other obstacle.

3. SAFETY



The flail cutter shaft is designed for standard rotation. Never operate the cutter shaft in the reverse rotation.



The rotating parts of this machine continue to rotate even after it has been shut off. The operator should remain in his seat for 60 seconds after the brake has been set and the tractor turned off and all evidence of rotation has ceased.

The Blade Storm flail mower is manufactured by Tiger Corporation for the use on Hagie Manufacturing Company machine model GST 20. This manual was written to incorporate both company's specifications and instructions.

Tiger mowers use balanced and matched system components for blade carriers, blades, cutter shafts, knives, knife hangers, drive train components and bearings. These parts are made and tested to Tiger specifications. Non-genuine "will fit" parts do not consistently meet these specifications. The use of "will fit" parts may reduce performance, void warranty, and present a safety hazard. Use genuine Tiger mower parts for economy and safety.

Tiger is a registered trademark of Tiger Corporation, Sioux Falls, SD.

Blade Storm is a trademark of Hagie Manufacturing Company, Clarion, IA.

3. SAFETY

3.3. Risk factors

Personal injury risks



- Insufficient training on correct use of the machine
- Unauthorized persons in the operating area
- Negligence of occupational safety regulations

Equipment damage risks




- Negligence of operating and service instructions
- Incorrect operation of the machine

3.4. Danger zones





Minimum safety distance from the machine during operation is 100 yards!

3.5. Warning symbols

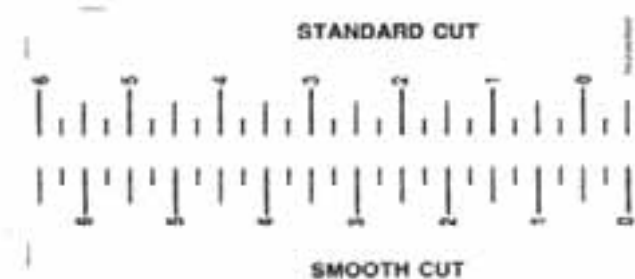


21405- MOWER DECK

 
3. SAFETY

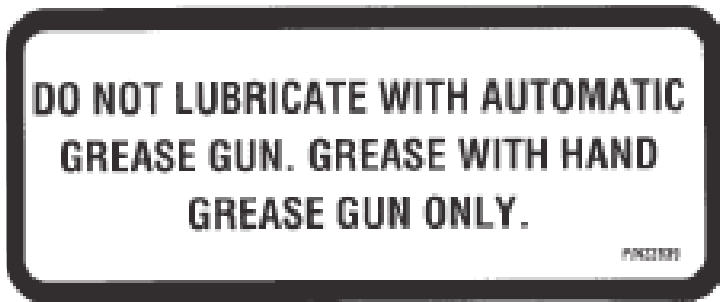

22839- MOWER DECK

 


22840- INSIDE OF CAB

 


22865- MOWER DECK

 3. SAFETY



24028- MOWER DECK

 

33743- INSIDE OF CAB

 



42350- MOWER DECK



3. SAFETY



6T3217- MOWER DECK

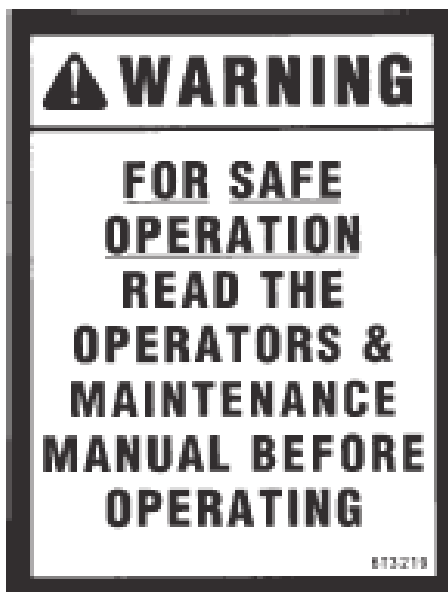

6T3219- INSIDE OF CAB

 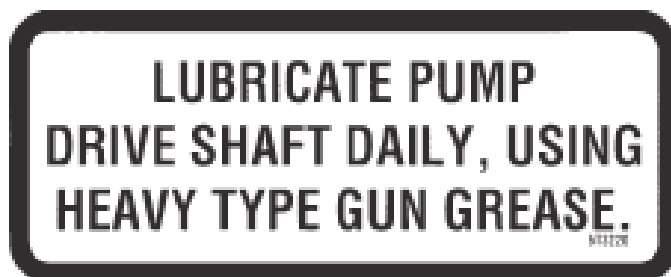


6T3220- FRONT PUMP MOUNT

3. SAFETY



 6T3224- MOWER DECK




6T3230- INSIDE OF CAB




6T3233- HYDRAULIC TANK

 3. SAFETY



6T3234– INSIDE OF CAB

 

6T3236– MOWER DECK



6T3242– INSIDE OF CAB




3. SAFETY



– MOWER DECK

4. INTRODUCTION

4.1. Dimensions

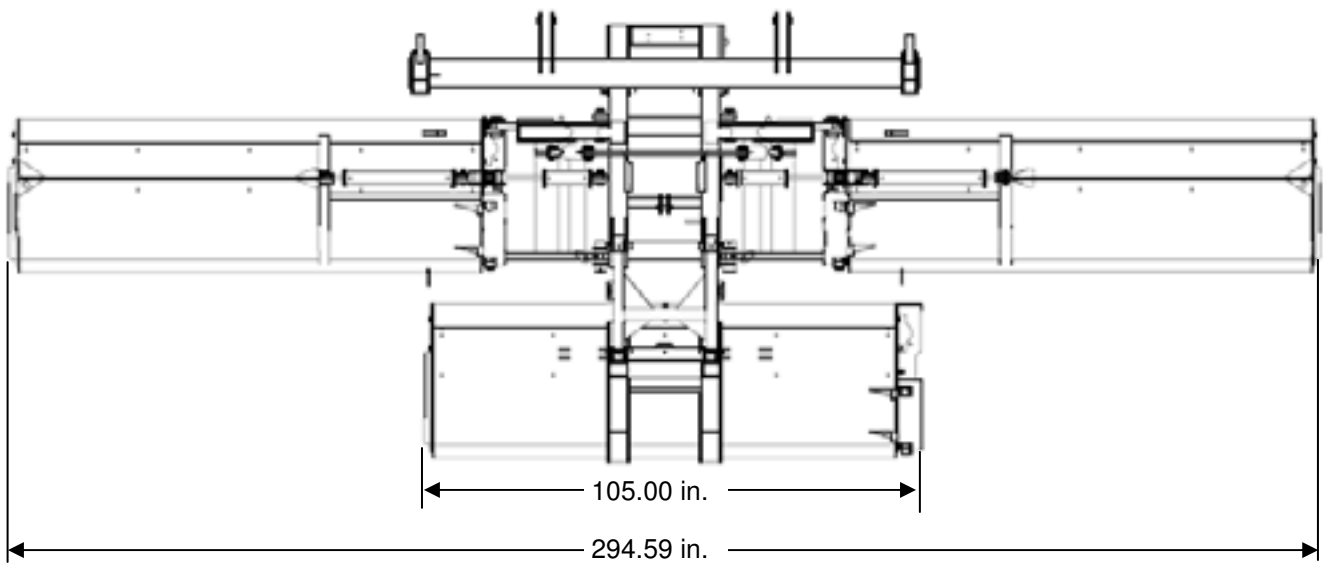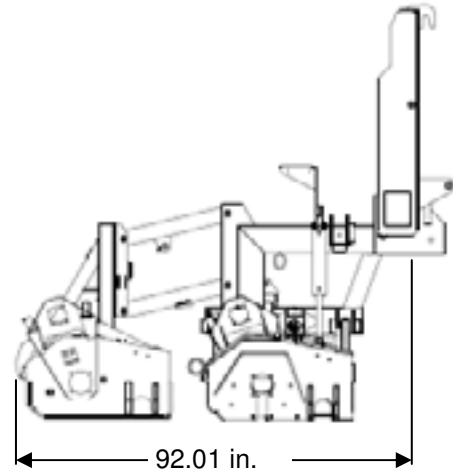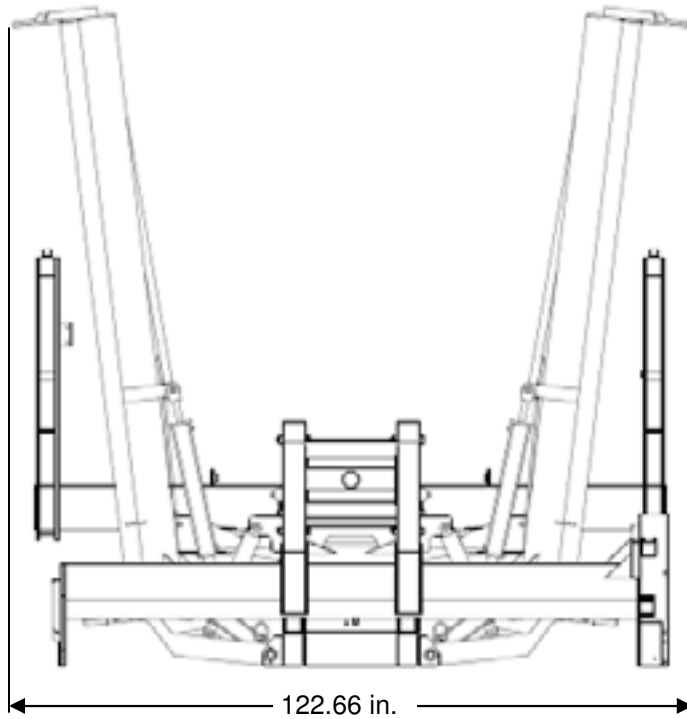

4. INTRODUCTION

4.2. Flail mowers

There are three separate flail mowers to the assembly. The left, center, and right flail mowers are capable of being operated individually as well as together.

Each of the mowers has several cutting blades strategically placed to keep balance during operation. If one of these blades is missing, it could cause an unbalanced situation that if not attended to may result in more severe damage. Make sure that all blades are properly attached and in good repair before operating the flail.



4.3. Auxiliary oil cooler

There is an auxiliary oil cooler located on the right side of the machine behind the solution tank. The auxiliary cooler is necessary because of the extra flow of oil to the flail mowers.



4. INTRODUCTION

4.4. Quick couplers

The flail's hydraulic hoses and the machine are designed for easy connection and disconnection with quick couplers.

There are 6 couplers on the underside of the machine behind the solution pump (A). There is also a connection point in the front of the machine (B).



4.5. Hydraulic pumps

The hydraulic system also has an extra pump stack (C) on the engine in order to be able to supply the power needed to operate the flail mowers.



5. OPERATION

5.1. Preparing for operation

Review the safety decals placed on the flail mower and inside the cab. These decals should be understood by each operator of the machine along with the safety and operation section of this book. The decals should be kept in good condition and replaced if damaged, missing, or faded.

Make sure that all pivot points have been greased. Make sure that all hoses are secured with zip ties (figure A). Replace broken zip ties if necessary. Make sure that there are no points of friction between the hose and another surface. If the hose is rubbing against a surface, place something between the hose and the surface and secure it with zip ties.

Before operating the mower, the cutter head and lift base should be slowly moved throughout the full range of motion. Watch for any condition that would cause pinching or excess stress on the hoses.

Take the tractor to a place free of loose objects on the ground. Operate the cylinders through their full range of motion again, to clear the lines of air. Follow the instructions in the operation section to operate the mower. Vibration of the mower should be minimal at all times. After a 5 minute test run, the knife bolts should be retorqued and once again after the first few hours of operation.

Without starting the mower, practice positioning the mower deck. When you feel comfortable at controlling the position of the mower, return the mower to the travel position, and transport the mower to the desired mowing location.



5. OPERATION

5.2. Connecting the flail to the tractor

Attachment change over instructions

1. Once the boom is removed from the tractor (see tractor manual), the tractor will be ready to attach the flail mower.
2. Pull up to the flail and shut off the engine.
3. Remove flail attachment side cover and connect the electrical connection.
4. Connect all hydraulic hoses from the flail to the tractor. Check all hoses on the flail for leaks.
5. Make sure the quick attach lock pins are open.
6. Start the engine and move slowly toward the attachment. You may have to deflate the air bags to get under the quick attach hooks on the flail.
7. Raise the left and right mower heads to allow the attachment to “hook” onto the tractor.
8. Once the attachment has dropped into place, shut the engine off and check that the lock pins are locked and all connections are secure.
9. Connect the turnbuckles.
10. Start the machine and place activate the WORK MODE and FLOAT switches.
11. You are now ready to mow.

5. OPERATION

5.3. Disconnecting the flail from the tractor

Attachment change over instructions

1. Pull the tractor and flail up to where you intend to store the flail. The flail side mowers must be down in the operating position for storage.
2. With the flails running, float all the heads to the ground.
3. Once all the heads are on the ground, shut the flail motors off.
4. Shut the tractor engine off. Disconnect the turnbuckles and unlock the quick attach lock pins.
5. Start the engine and turn the FLOAT switch off.
6. Lower the left and right flail heads to raise the attachment off the quick attach hooks. You may have to release some air out of the air bags to get low enough to back away from the attachment.
7. Shut off the machine again.
8. Disconnect the hydraulic hoses. Use the caps provided to cover hose ends.
9. Disconnect the electrical connectors and replace the flail attachment side cover.
10. Back away from the attachment.

5. OPERATION

5.4. Pre-operative inspections

The operator is responsible for inspecting the flail for broken or missing parts, shields, leaks, or any other damage. These checks should be performed before operation and should be repeated at the end of the day. This way any fluid leaks and damages can be detected more quickly and repair procedures can be planned well in advance.

1. Check the condition of the structures

Check the condition of the structures

- Welded seams
- Tightness of bolts
- Possible wear
- Damage
- Shields
- General structure of the flails

2. Check the condition cutter blades

Check the wear of the flail cutting blades. Do attempt to sharpen or repair damaged or dull blades. Replace the blades in complete sets only. Failure to do so may result in an poor balance and a vibration that could cause severe damage to the mower.

Make sure that all blades are properly secured to the cutter shaft. Replace all the blades even if only one is missing. Never operate the flail with a missing blade. Check to make sure that all nuts and bolts are not loose.

5. OPERATION




3. Other daily maintenance checks

- Lubricate pivot points
- Check hydraulic fittings for leaks
- Check/adjust belts
- Check the hydraulic fluid level
- Lubricate cutter shaft and ground roller bearings

5. OPERATION

5.5. Operating the flail

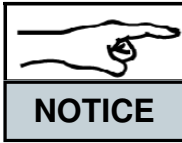

Once the flail is at the intended mowing site, check to make sure that the flail height is appropriate for the job.

Lower the mower deck so that it is slightly above the material to be cut. This allows the mower to start while it is not under a load.


The mower deck should be adjusted so that part of the weight is carried by the ground roller. This allows the roller to follow the contour of the ground more easily during operation.

To ensure a desirable cut, the speed of the engine should be maintained at approximately 1800 to 2200 RPM. If the engine slows to below 1800 RPM, shift to the next lower gear. The engine should not be operated more than 2400 RPM at any time.

Sharp cutting blades will perform better in tougher conditions than ones that are worn. If any of the flail mower decks begin to vibrate, shut down the mowers and the tractor immediately. Once rotation has stopped, check the spindles for damaged cutting blades or an obstruction, such as wire or rope wrapped around the spindle.

Do not operate the mower heads with any person within the 300 feet safety zone. If a person comes into the safe zone, shut the mowers down immediately!

If a problem arises that causes the tractor to stall, disengage the mower, start the tractor, raise the mower from the cut. Shut the tractor off and inspect the mower, blades and disk for damage before engaging the mower again.

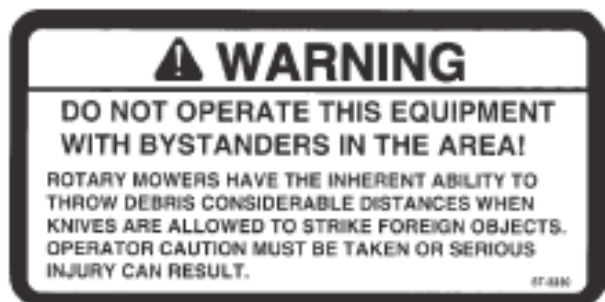


5. OPERATION

If the blades become jammed or stop turning, raise the heads slightly or back the tractor up. This should clear the obstruction. If this does not allow the cutter heads to begin turning, shut the cutter heads and the tractor off and set the parking brake. Wait until all motion has stopped and then manually clear the cutter heads.

Follow the maintenance instructions for lubrication intervals and procedures. Check the bolts and tighten them if necessary after the first day of operation. Regularly check the bolts to ensure that they do not become loose and cause damage.

5. OPERATION

5.6. Unfolding/folding mower heads

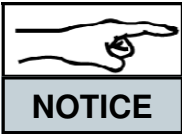

Be sure to remove the safety pins from the flail mower heads before attempting to lower them into operating position!

In order to be able to unfold the mower heads from the transport position, you must run the heads all the way in by activating the left and right fold switch on the control handle.

Once the heads are folded all the way in, you must raise them up as far as you can. This is to disengage the hook from the stop latch.

Unfold the heads by engaging the left and right fold switches on the control handle in the “OUT” position. If the hook does not disengage the latch, repeat the process until the heads unfold. Continue to manually unfold the heads until they are approximately at a 45° angle (from vertical) and engage the FLOAT mode switch. This will allow the heads to ease to the operating position evenly. It is not recommended that this process be performed manually as the heads can be lowered incorrectly causing severe damage.

To fold the heads into transport position, disengage the FLOAT mode switch. Raise the heads to the end of cylinder travel using the left and right raise switch on the control handle. Then, using the left and right fold in switch on the control handle, fold the mower heads all the way in until they contact the stop. Once they are folded all the way in, lower the heads so that the stop hook engages.



5. OPERATION

5.7. Using the flail controls

- A. All mower heads raise
- B. All mower heads lower
- C. Left mower head raise
- D. Left mower head fold out
- E. Left mower head lower
- F. Left mower head fold in
- G. Master on/off switch
- H. Right mower head lower
- I. Right mower head fold in
- J. Right mower head fold out
- K. Right mower head raise
- L. Work mode
- M. Float mode
- N. Left flail mower individual on/off switch
- O. Center flail mower individual on/off switch
- P. Right flail mower individual on/off switch



The **WORK** mode switch must be activated to provide power to the flail.

5. OPERATION

5.8. Mowing with the flail

Before starting to mow with the flail mower, the area to be mowed should be inspected for any obstructions or debris that may cause damage to the flail blades, machine, operator, or other structures.

The mower must be in operating position to mow. The WORK mode and the FLOAT mode switches must be activated. The tractor's parking brake must also be released in order to engage the flails.

The mower heads are capable of being run individually or all at once. The mower heads are turned on individually by activating the spray switches on the side console.

To activate the left mower head, depress the top of the third spray switch. To deactivate the left mower head, depress the bottom of the third spray switch.

To activate the center mower head, depress the top of the fourth spray switch. To deactivate the center mower head, depress the bottom of the fourth spray switch.

To activate the right mower head, depress the top of the fifth spray switch. To deactivate the right mower head, depress the bottom of the fifth spray switch.

Once the mower heads have been activated, the MASTER SPRAY switch on the control handle must be activated to engage the hydraulic motors.

The mower heads can be moved simultaneously by activating the ALL MOWER HEAD RAISE (transom lift) switch on the control handle. If a head is not activated (turned off on the spray switch console), it will not move during this function.

5. OPERATION

5.9. Transporting the flail mower

The flail should only be transported between job sites in the transport position (the mower heads in the vertical position). Never operate the flail mowers in the vertical position!



6. TIGHTENING TORQUES

Thread Size:	SAE GRADE 5		SAE GRADE 8		SAE GRADE 8 Distorted Center Lock Nuts	
	Assembly Torque - Ft-Lbs		Assembly Torque - Ft-Lbs		Assembly Torque - Ft-Lbs	
	Dry Plated	Lubricated	Dry Plated	Lubricated	Dry Plated	Lubricated
1/4 - 20	6	6	9	8	12	11
1/4 - 28	7	6	10	9	13	12
5/16 - 18	13	12	19	17	24	22
5/16 - 24	14	13	21	19	26	24
3/8 - 16	23	21	34	30	41	37
3/8 - 24	26	23	38	34	45	41
7/16 - 14	37	33	54	49	62	57
7/16 - 20	41	37	60	54	68	62
1/2 - 13	56	50	84	76	97	89
1/2 - 20	63	57	92	83	105	96
9/16 - 12	79	71	121	108	140	127
9/16 - 18	91	81	135	121	154	140
5/8 - 11	112	101	167	150	193	176
5/8 - 18	127	114	204	184	230	210
3/4 - 10	198	178	296	266	330	300
3/4 - 16	221	199	331	298	365	332
1 - 8	484	436	718	646	786	714
1 - 12	525	472	782	704	850	772


Thread Size:	CLASS 8.8 METRIC		CLASS 10.9 METRIC	
	Assembly Torque - Ft-Lbs		Assembly Torque - Ft-lbs	
	Dry	Lubricated	Dry	Lubricated
6 X 1	8	6	11	8
8 X 1.25	19	14	27	20
10 X 1.5	38	29	53	40
12 X 1.75	66	50	93	70
14 X 2	104	78	148	111
16 X 2	167	125	230	173
20 X 2.5	325	244	448	336

7. MAINTENANCE

7.1. Maintenance precautions

The performance of the flail mower depends on how it is maintained. Following a regular maintenance schedule will result in the best performance and longest life of the mower.

- Make sure that the end of the grease gun and the end of the grease zerk are clean of any debris that could enter the lubrication system. Debris or dirt that enters into bearings when greasing will cause immediate damage!
- Use a hand pump grease gun when lubricating the mower. A power grease gun may force too much grease into an area and cause distortion of seals and over greasing of bearings.
- Be aware of maintenance indicators such as vibrations, noises, reduced performance, etc. Take action to correct any problems immediately.
- Release of energy from pressurized systems may cause inadvertent actuation of the hydraulic cylinders. Before disconnecting any hoses, relieve pressure by turning the tractor off and setting the heads on the ground.
- Do not use hands to check for hydraulic hose leaks! Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and cause serious injury. If fluid is injected into skin, it must be surgically removed within a few hours to prevent gangrene from setting in.
- Make sure all hoses and fittings are in good condition before pressurizing the hydraulic system.

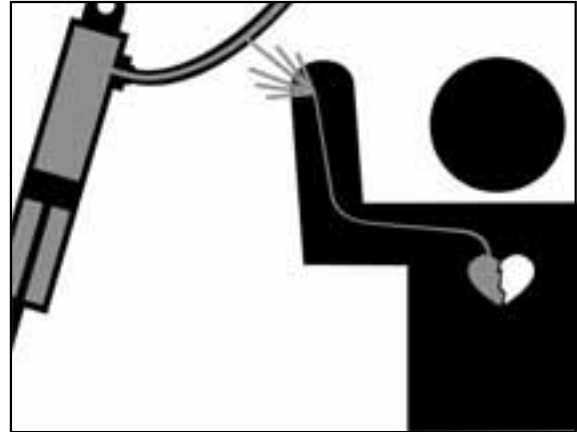

7. MAINTENANCE

7.2. Daily maintenance checks

The intervals at which regular servicing should be done are based on hours of operation. Use the tractor's hour meter to determine when regular servicing is required.

Point of Service	Action	Comments
Pivot points	Lubricate	Inject grease until it appears at ends
Hydraulic fittings	Check for leaks	Tighten when needed. Do not use hands to check for leaks, see maintenance precautions.
Cutting blades	Check	Inspect for missing or damaged blades, change as needed.
Cutter shaft mounting bolts	Check	1/2" x 2" torque to 84 ft. lbs.
Blade mounting bolts	Check	Retorque to blade replacement specifications.
Belts	Check/adjust	Check if broken, tighten as required
Mower deck	Check	Retorque bolts to specifications.
Cutter shaft and ground roller	Lubricate	Grease as instructed in detailed maintenance section.

7. MAINTENANCE

7.3. Inner and outer lift base pivot points

Locate the grease zerks on the inner and outer lift base pivot bosses. Inject a lithium based grease conforming to NLGI 2-ISO 320 specifications into each zerk until it protrudes from joints. Grease all pivots daily or every 8 hours of service.


With the mower head lowered, locate the grease zerks on the linkage and pivot bosses. Inject lithium based grease that conforms to NLGI 2-ISO 320 specifications until it protrudes from the ends. With the mower heads in this position it is also possible to grease the lift base cylinder anchors and pins. Now raise the mower head to expose the remaining zerks on the deck tilt linkages and on the other end of the cylinder.

7. MAINTENANCE

7.4. Adjusting the cutting height

Loosen the four ground roller bracket lock nuts.

Loosen the adjustment rod lock nut and turn the adjustment rod to adjust the cutting height. The cutting height is indicated by the end of the adjustment rod on the cutting height decal. When cutting height has been achieved, tighten the ground roller bracket lock nuts and the adjustment rod lock nut securely. Be sure both sides of the flail are adjusted the same.

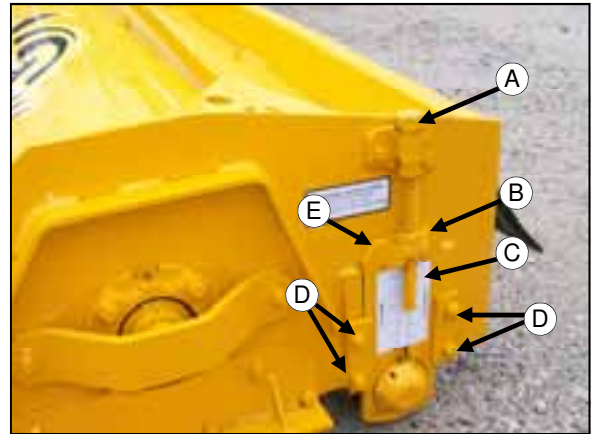

- A. Adjustment rod
- B. Adjustment rod lock nut
- C. Cutting height decal
- D. Ground roller bracket lock nuts
- E. Ground roller bracket

7.5. Greasing cutter shaft

Locate grease zerks on each end of cutter shaft(s), these are located on the bearing cover. Normal conditions require one or two pumps in each bearing, using a lithium based grease conforming to NGLI 2– ISO 320 specifications. This is to be done with a standard grease gun daily or **at 8 hour intervals. Caution: Over greasing may cause premature seal failure.**

7. MAINTENANCE

7.6. Greasing ground roller shaft

Locate grease zerks on each end of roller tubes at lower rear of head. Normal conditions require one or two pumps in each bearing, using a lithium based grease conforming to NGLI 2-ISP 320 specifications. This is to be done with a standard grease gun daily or **at 8 hour intervals. Caution: Over greasing may cause premature seal failure.**

7.7. Greasing idler tension arms

Locate the access holes and grease zerks in the belt shields of the flails. Normal conditions require one pump of a multipurpose grease. This is to be done with a standard grease gun daily or at 8 hour intervals.

7.8. Idler tensioning

Locate the tensioning rod for each flail. Loosen the locking nut. Turn the adjusting nut until the washer in between the spring and nuts is flush with the spring housing or guide. Tighten locking nut securely. For standard cut on side flail adjust until the spring washer is flush with the top of the spring housing, as shown below.



7.9. Daily maintenance schedule

Located in the back of this book is a daily maintenance schedule. Please make copies of the page and use it to record daily maintenance procedures and other maintenance issues.

8. TROUBLE SHOOTING

8.1. Table 1

Symptoms	Cause	Remedy
Vibration	<ol style="list-style-type: none"> Loose belts Cutter assembly unbalanced 	<ol style="list-style-type: none"> Check all bolts and tighten to torque specifications in this section. <ol style="list-style-type: none"> Check for damaged blades or cutter shaft. Check for wire, rope, etc., entangled in cutter assembly.
Mower will not lift	<ol style="list-style-type: none"> Hydraulic fluid low Leaks in the hydraulic line Faulty relief valve Kinked or blocked hose Faulty cylinder 	<ol style="list-style-type: none"> Check and refill hydraulic fluid. Tighten or replace fittings or hoses. Check pressure line. Line pressure in control valve should be at least 2250 psi. Clean or replace lines. Inspect, repair, or replace cylinder.
Mower will not start or run	<ol style="list-style-type: none"> Blown fuse Low oil level Line leak 	<ol style="list-style-type: none"> Check fuses between mower switch and ignition. Replace if necessary. Check hydraulic fluid and fill if necessary. Check all fittings and lines, re-tighten or replace.
Oil temperature rises above 200 degrees Fahrenheit	<ol style="list-style-type: none"> Low oil level Kinked or blocked hose Worn pump/motor 	<ol style="list-style-type: none"> Bring oil to proper level. Inspect, repair, replace hoses. Disable and repair.

NOTE: If flow meter is available, check pressure and flow volume for all suspected hydraulic problems.

If the solution to your problems can not be found in this section, please call the Hagie Customer Service department.

8. TROUBLE SHOOTING

8.1. Table 1 (continued)

Symptoms	Cause	Remedy
Motor runs but will not cut	<ol style="list-style-type: none"> 1. Belts 2. Tensioner 	<ol style="list-style-type: none"> 1. Inspect belts and pulleys. Replace belts and repair as needed. 2. Adjust tensioner nut until flat washer is flush with top of guide.
Motor turns slowly or not at all	<ol style="list-style-type: none"> 1. Contaminants restricting spool movement in valve body. 2. Suction lines obstructed. 3. Low oil level. 	<ol style="list-style-type: none"> 1. Remove large nut on side of large valve block. Remove spring, and use needle nose vise grip to pull spool from block. Check block and spool for contaminants and scratches. Clean parts and replace if scratched. 2. Check for kinks or obstructions in suction hose. 3. Check hydraulic fluid level.

NOTE: If flow meter is available, check pressure and flow volume for all suspected hydraulic problems.

If the solution to your problems can not be found in this section, please call the Hagie Customer Service department.

9. PARTS

9.1. About the drawings


The drawings on the following pages are the property of Tiger Corporation and Hagie Manufacturing Company. Each company, separately, reserves the right to make changes to the design of the mowers or their function without obligation to existing attachments. The Tiger drawings may not exactly represent the attachment as it is used on the Hagie GST 20 machine.

There are Parts Order Fax sheets in the back of this manual, please keep a blank copy for future ordering needs.

If you have any questions about your attachment or need assistance ordering parts, please call Hagie Customer Service Department.

9. PARTS

9.3. Hydraulic deck motor

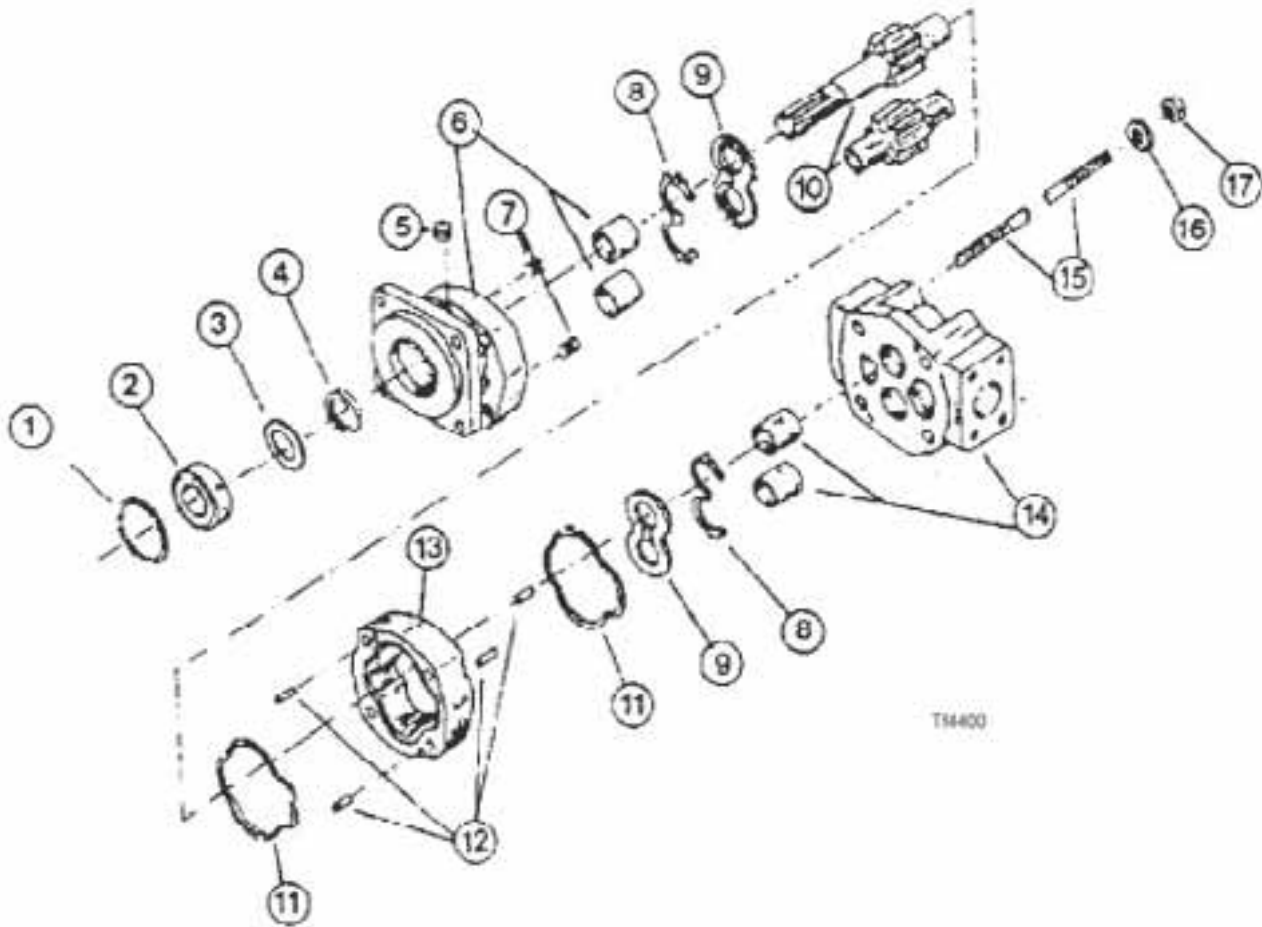


TM400

ITEM	PARTNO.	QTY.	DESCRIPTION
1	TF4401	1	SNAP RING
2	TF4402	1	BEARING
3	TF4400	1	SEAL RETAINER
4	TF4403	1	SEAL
5	TF4405	1	PLUG
6	TF4406	1	SHAFT END COVER W/ BEARINGS
7	TF4418	2	CHECK ASSEMBLY
8	TF4407	2	CHANNEL SEAL
9	TF4408	2	THRUST PLATE
10	TF4409	SET	INTEGRAL SHAFT AND GEAR
11	TF4410	2	GASKET SEAL
12	TF4401	4	DOWEL PIN
13	TF4412	1	GEAR HOUSING
14	TF4413	1	PORT END COVER W/ BUSHINGS
15	TF4414	4	CAPSCREW
16	TF4415	4	WASHER
17	TF4416	4	NUT
	TF4417	AVAIL.	SEAL KIT

9. PARTS

9.4. Lift cylinders

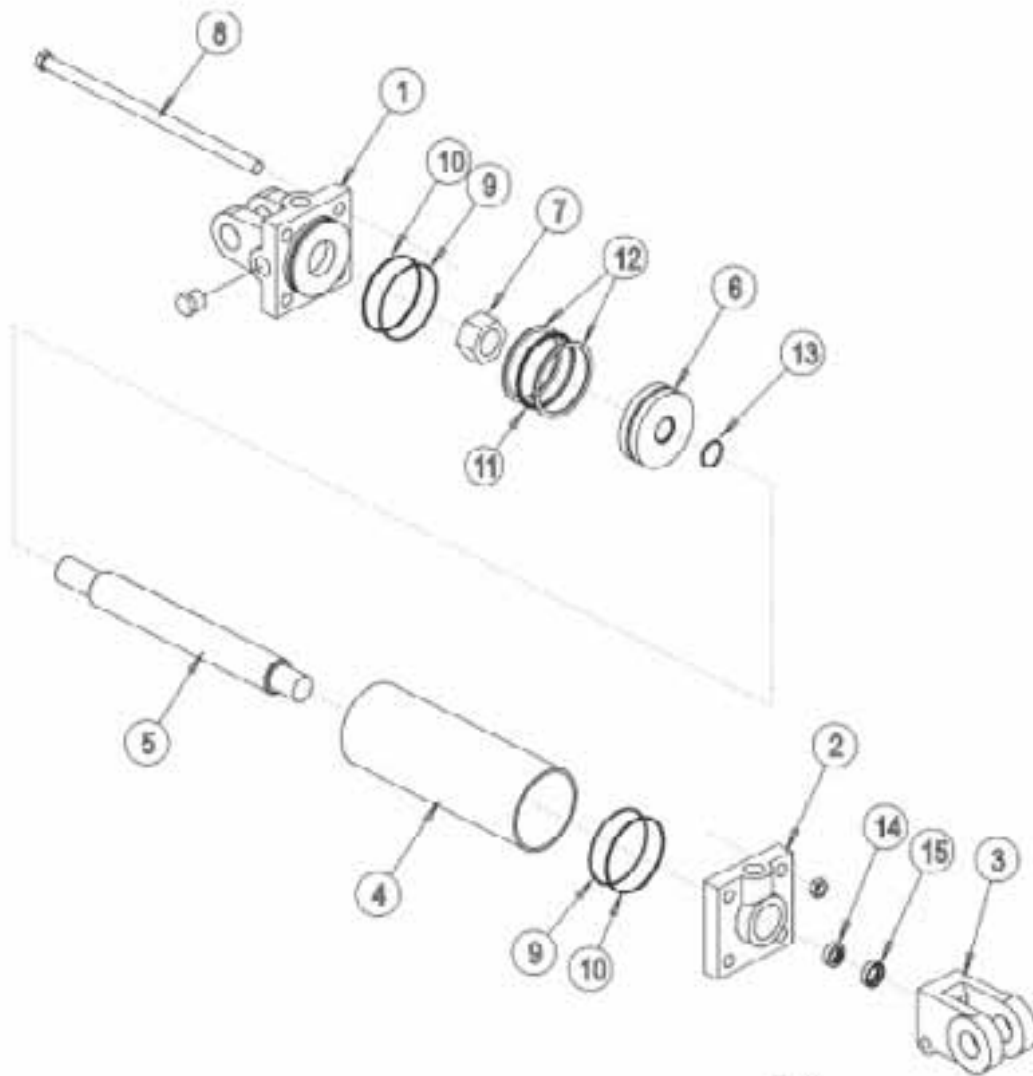


676100

ITEM	PARTNO.	QTY.	DESCRIPTION	3" X 10" CYLINDER #676151R			3" X 12" CYLINDER #32215				
ITEM	P/N	QTY.	DESCRIPTION	ITEM	P/N	QTY.	DESCRIPTION	ITEM	P/N	QTY.	DESCRIPTION
1	670107	1	CYLINDER BUTT	1	670167	1	CYLINDER BUTT	1	670167	1	CYLINDER BUTT
2	670170	1	CYLINDER GLAND	2	670170	1	CYLINDER GLAND	2	670170	1	CYLINDER GLAND
3	670178	1	CLEVIS END	3	670178	1	CLEVIS END	3	670178	1	CLEVIS END
4	23870	1	CYLINDER TUBE (3 X 8)	4	670194	1	CYLINDER TUBE	4	670204	1	CYLINDER TUBE
4A	670194	1	CYLINDER TUBE (3 X 10)	5	670181	1	PISTON ROD	5	670203	1	PISTON ROD
4B	670180	1	CYLINDER TUBE (3 X 18)	6	670173	1	PISTON	6	670173	1	PISTON
5	23809	1	PISTON ROD (3 X 8)	7	670179	1	LOCKNUT	7	670179	1	LOCKNUT
5A	670161	1	PISTON ROD (3 X 10)	8	670176	4	TIE ROD ASSY	8	670205	1	TIE ROD ASSY
5B	670162	1	PISTON ROD (3 X 18)	9	670187	AVAIL.	SEAL KIT	9	670187	AVAIL.	SEAL KIT
6	670173	1	PISTON	9		2	O - RING	9		2	O - RING
7	670170	1	LOCKNUT	10		2	BACK - UP WASHER	10		2	BACK - UP WASHER
8	23871	4	TIE ROD ASSY (3 X 8)	11		1	O - RING	11		1	O - RING
8A	670176	4	TIE ROD ASSY (3 X 10)	12		2	BACK - UP WASHER	12		2	BACK - UP WASHER
8B	670177	4	TIE ROD ASSY (3 X 18)	13		1	O - RING	13		1	O - RING
9	26010	2	O-RING	14		1	U - CUP	14		1	U - CUP
10	26011	2	BACK-UP WASHER	15		1	WIPER	15		1	WIPER
11	670181	1	O-RING								
12	670194	2	BACK-UP WASHER								
13	670182	1	O-RING								
14	670180	1	U-CUP								
15	670180	1	WIPER								
	670187	AVAIL.	SEAL KIT								

3" X 10" CYLINDER #670150			
ITEM	P/N	QTY.	DESCRIPTION
1	670167	1	CYLINDER BUTT
2	670170	1	CYLINDER GLAND
3	670178	1	CLEVIS END
4	670194	1	CYLINDER TUBE
5	670181	1	PISTON ROD
6	670173	1	PISTON
7	670179	1	LOCKNUT
8	670176	1	TIE ROD ASSY
9	670187	AVAIL.	SEAL KIT
9		2	O - RING
10		2	BACK - UP WASHER
11		1	O - RING
12		2	BACK - UP WASHER
13		1	O - RING
14		1	U - CUP
15		1	WIPER

9. PARTS

9.5. Standard duty side flail drive assembly

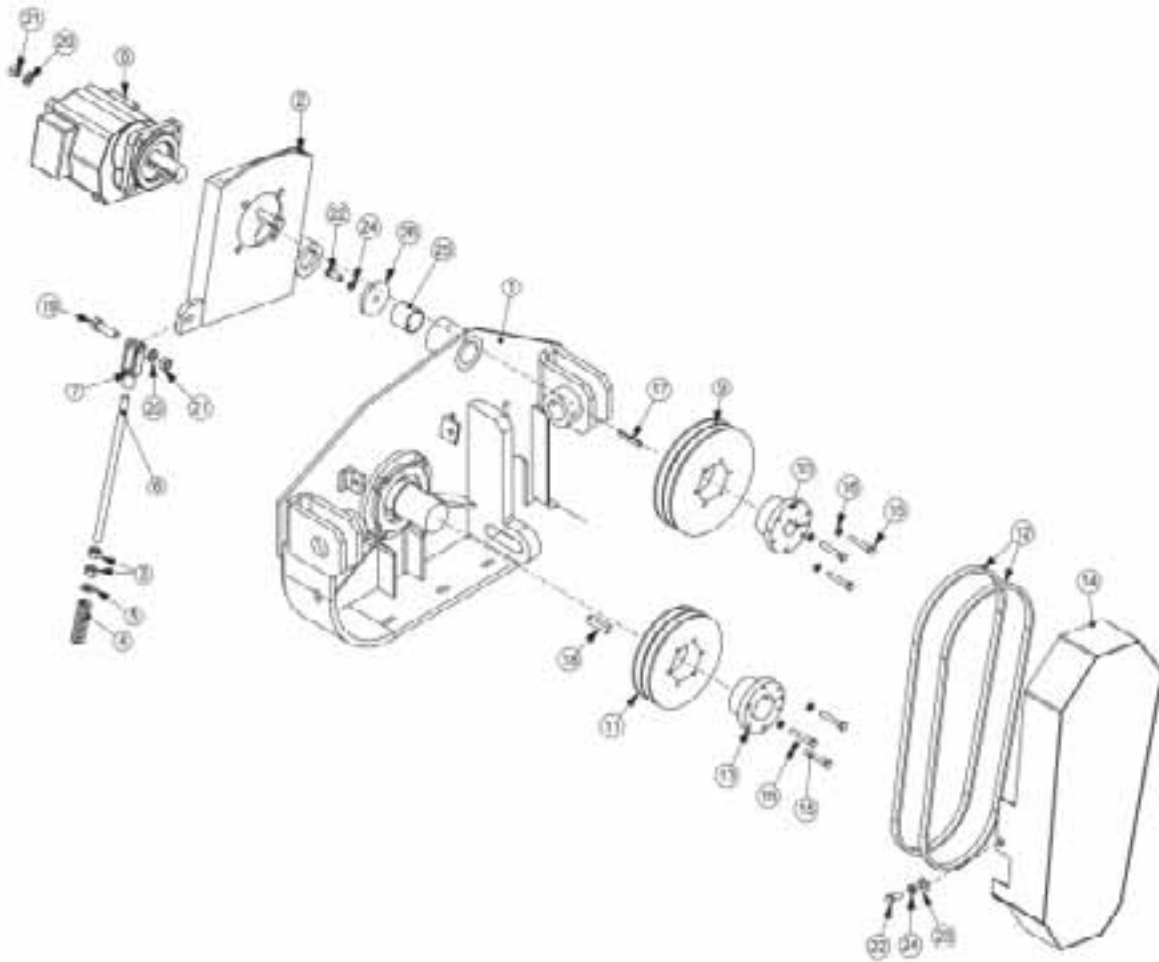


1213

ITEM	P/N	QTY	DESCRIPTION
1	REF.	*	BONNET - REFER TO HEAD PARTS
2	280798	1	MOTOR CHANVEL (COMBO)
2A	32288	1	MOTOR MOUNT (T3F)
2B	32287	1	MOTOR MOUNT (T3F)
3	21700	2	HEX NUT, 1/2", NF
4	TF3525A	1	SPRING TENSIONER
5	27508	1	BUSHING MACH, 1.00x1.00x1.40A
6	32494	1	ROD, THREADED, 1/2-20NF, 11" LONG
7	PT3011A	1	CLEVIS, 6"
8A	86584013	1	CURRENT MOTOR, T3F, J05586, M358 1"-GEAR
	32815	1	ORIGINAL MOTOR, T3F, J05800, M360 1"-GEAR
8B	86584013	1	CURRENT MOTOR, COMBO, 63", 25" M358-1 3/4 GEAR
	23174	1	ORIGINAL MOTOR, COMBO, 63", 25" M358-1 3/4 GEAR
9	TF3044	1	SHEAVE, 8.0 (COMBO)
9A	TF3041	1	SHEAVE, 8.7 (T3F)
10	TF3013	1	BUSHING QD, 3K, 1-1/4, 1/4 KEY (COMBO)
10A	TF3016	1	BUSHING QD, 5Q, 1-1/4 (T3F)
11	TF3040	1	SHEAVE, 0.3
12	28702	2	V-BELT (500)
13	28723	1	BUSHING QD, 5K, 1-15/16
14A	287008	1	BELT SHIELD, COMBO
14B	32585	1	BELT SHIELD, T3F, 63" (RIGHT HAND)
14C	32586	1	BELT SHIELD, T3F, 63" (LEFT HAND)
15	21584	8	CAPSCREW, 5/16 x 2, NC
16	21607	8	LOCKWASHER, 5/16"
17	28672	1	KEY, 1/4" SQ X 2"
18	TF1025	1	KEY, 1/4" X 1/2" X 1-7/8" SQ
19	21732	5	CAPSCREW, 1/2 x 1 3/4, NC
20	21060	5	LOCKWASHER, 1/2"
21	21727	3	NYLOCK NUT, 1/2
22	21630	3	CAPSCREW, 3/8 x 1, NC
23	22019	2	FLATWASHER, 2 3/8"
24	21068	3	LOCKWASHER, 3/8"
25	27580	1	BEARING QD, 1-1/2", GRM
26	28882	1	RETAINING WASHER, 2-1/2 X 5/16

9. PARTS

9.6. 102" Rear flail standard rotation

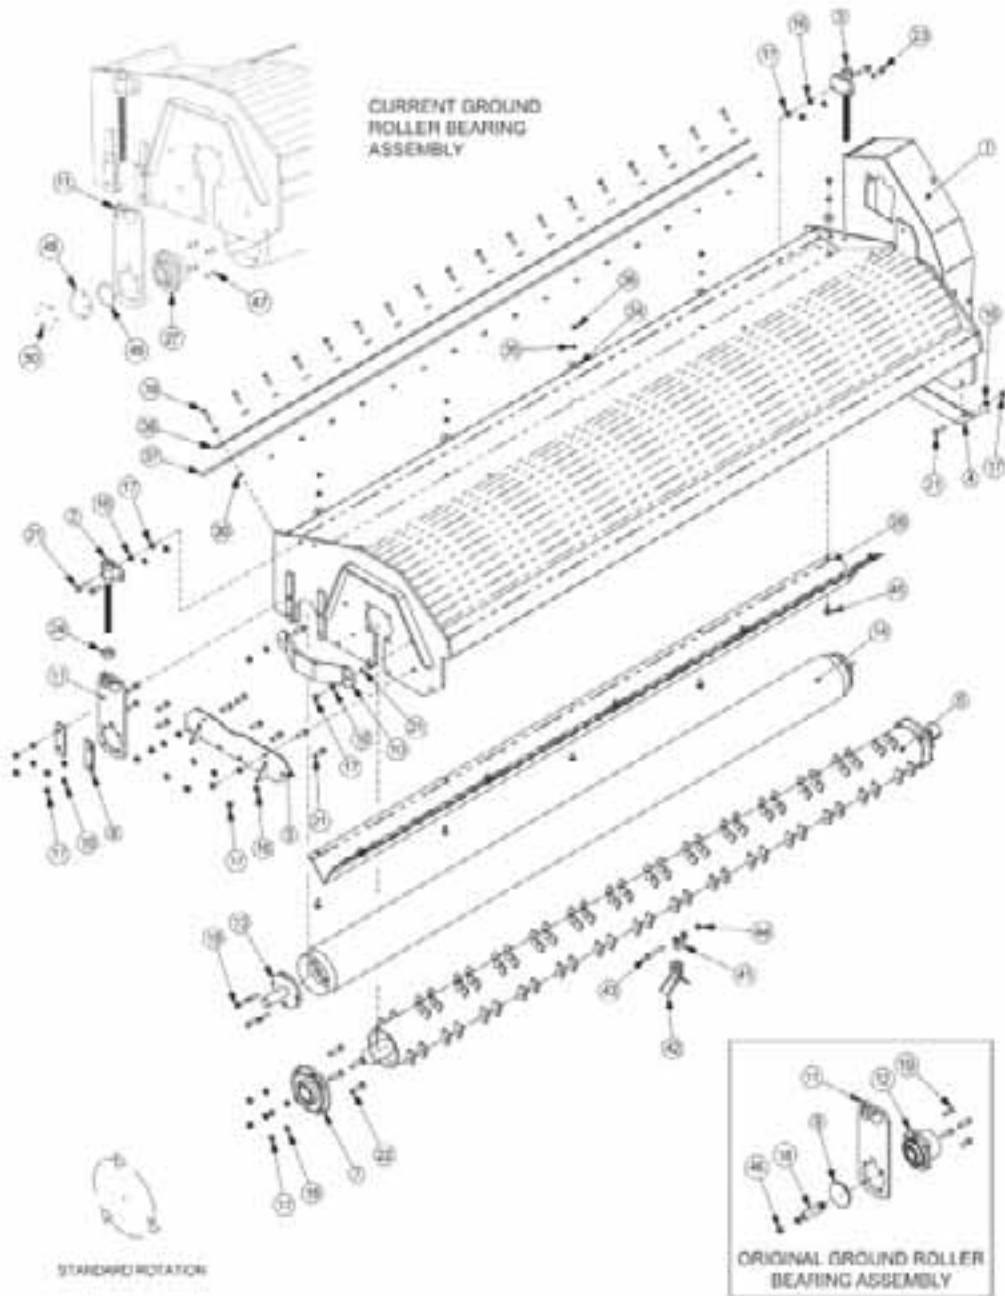


33027 DONNET ASSEMBLY

7-8-02

ITEM	PN	QTY	DESCRIPTION
1	22946	1	BONNET 102 HD RCM
2	TF4204	1	ROD,GROUND ROLLER ADJUT
3	TF4205	1	ROD,GROUND ROLLER ADJUT
4	TF4395	1	SKD SHOULDER PROFILE -INNER
5	TF4375	1	SKD SHOULDER PROFILE -OUTER
6	TF1707C	1	SLITSHT ASSY 102HC
7	TF1018	2	BEARING FLANGE 2-5/16
8	TF4308	4	PLATE,GROUND ROLLER LOCK
9	TF1044	2	DUST CAP
10	TF1040	1	GUARD, CUTTER SHAFT
11	TF4323A	2	GROUND ROLLER ADJ,BRN
12	TF1022S	2	BEARING FLANGE 1-3/8 CPLT ASSY
13	TF1040B	2	GROUND ROLLER STUB SHAFT
14	25949	1	GROUND ROLLER, 102
15	67209	8	FLDN BOLT 1-1/2 X 2" NC
16	21600	36	LOCKWASHER, 1/2"
17	21702	36	HEX NUT, 1-1/2" NC
18	38805	2	BEARING CAP BEPPER
19	67220	12	CAPSCREW, 3/16 X 1-1/2, SOCKET HEAD
20	67201	4	CAPSCREW, 3/16 X 1, SOCKET HEAD
21	21731	12	CAPSCREW, 1/2 X 1-1/2, NC
22	21732	8	CAPSCREW, 1/2 X 2, NC
23	21733	2	CAPSCREW, 1/2 X 1-3/4, NC
24	21698	2	HEX NUT, 3/4" (ACME THRD)
25	21730	8	CAPSCREW, 1/2 X 1-1/4, NC
26	0950020	2	BAFFLE, FLAL, 7" HD, STC
27	TF1702	1	BEARING FLANGE, 1-3/8"
28	670916	8	LOCKWASHER, 8MM
29	21628	8	CAPSCREW, 8MM X 20MM (1.25 RPTDN)
30	670920	4	LOCKWASHER, 10MM
31	22421	2	CAPSCREW, 16MM X 40MM (2.5 RPTDN)
32	38873	1	CAPSCREW, 16MM X 20MM (2.5 RPTDN)
33	670915	10	WASHER FENDER 3/8"
34	21640	10	LOCKWASHER, 3/8"
35	21625	20	HEX NUT, 3/8" AG
36	TF1704A	1	FLAP DEFLECTOR, TSP1704
37	TF1700	1	FLAP RETAINING BAR
38	21632	18	CAPSCREW, 3/8" X 1-1/2" NC
39	22019	18	FLATWASHER, 3/8"
40	TF1020	8	KNIFE MTD OLIVE, FLAL
41	20714	112	KNIFE FLAL, STANDARD
42	39411	88	KNIFE MOUNTING BOLT, FLAL
43	21677	88	NYLOCK NUT, 7/16" NC
44	67220	10	CARRIAGE BOLT, 3/4" X 1" NC
45	24701	4	HEX NUT, 1-1/8" NC (STOVER NUT)
46	67231	8	CAPSCREW, 1-1/8" X 1", SOCKET HEAD
47	0950027	2	CAP BEARING, GROUND ROLLER
48	0950020	2	O-RING, 2-5/8" X 5/32"
49	0950051	12	CAPSCREW, 5/16 X 1/2

9. PARTS


9.8. 102" Rear flail drive assembly

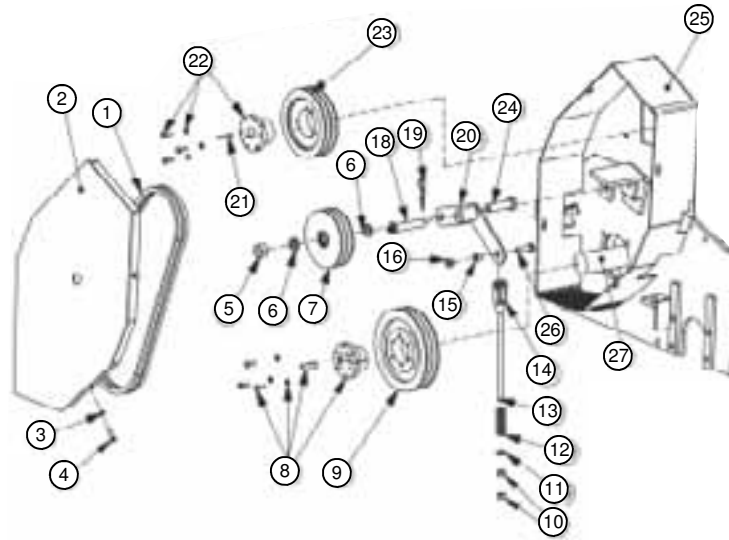

ITEM	P/N	QTY	DESCRIPTION	ITEM	P/N	QTY	DESCRIPTION
1	TF3023	2	V-BELT (630)	15	TF3610	1	BUSHING, REAR FLAIL, IDLER
2	31286A	1	SHIELD, BELT, TRF, HD	16	6T2418	1	HEX NUT, 1/2" NC
3	21988	4	LOCKWASHER, 3/8"	17			
4	21630	4	CAPSCREW, 3/8" X 1, NC	18	TF3605	1	PIN, IDLER ARM 3/4" X 4-1/4"
5	31740	1	NYLOCK NUT, 20MM (2.5PITCH)	19	6T3004	1	R-CLIP (HAIRPIN COTTER, 3/16")
6	24881	2	LOCKWASHER, 20MM	20	TF1180	1	ARM, IDLER (REAR FLAIL/RR)
7	31295	1	SHEAVE, IDLER ASSY, 6.3	21	28572	1	KEY, 1/4" SQ X 2"
8	TF3011	1	BUSHING, QD, SK 2-3/16"	22	30049	1	BUSHING, QD, SK 1-1/4, 1/4 KEY
9	TF3043	1	SHEAVE, 7.5	23	28570	1	SHEAVE, 9.0
10	21700	2	HEX NUT, 1/2", NF	24	28399	1	CAPSCREW, 20MM X 80MM (2.5PITCH)
11	27938	1	BUSHING, MACH, 1 OD X 1/2 ID X 14 GA	25	22046J	1	BONNET, 102, HD, RCM
12	TF3620A	1	SPRING, TENSIONER	26	21732	1	CAPSCREW, 1/2 X 1-3/4, NC
13	25175	1	RAW RD, THREADED, 1/2-20	27	TF1707C	1	CUTSHFT ASSY, 102 HD
14	PT3611A	1	CLEVIS, 6"				

9. PARTS

9.9. Side deck motor– high pressure

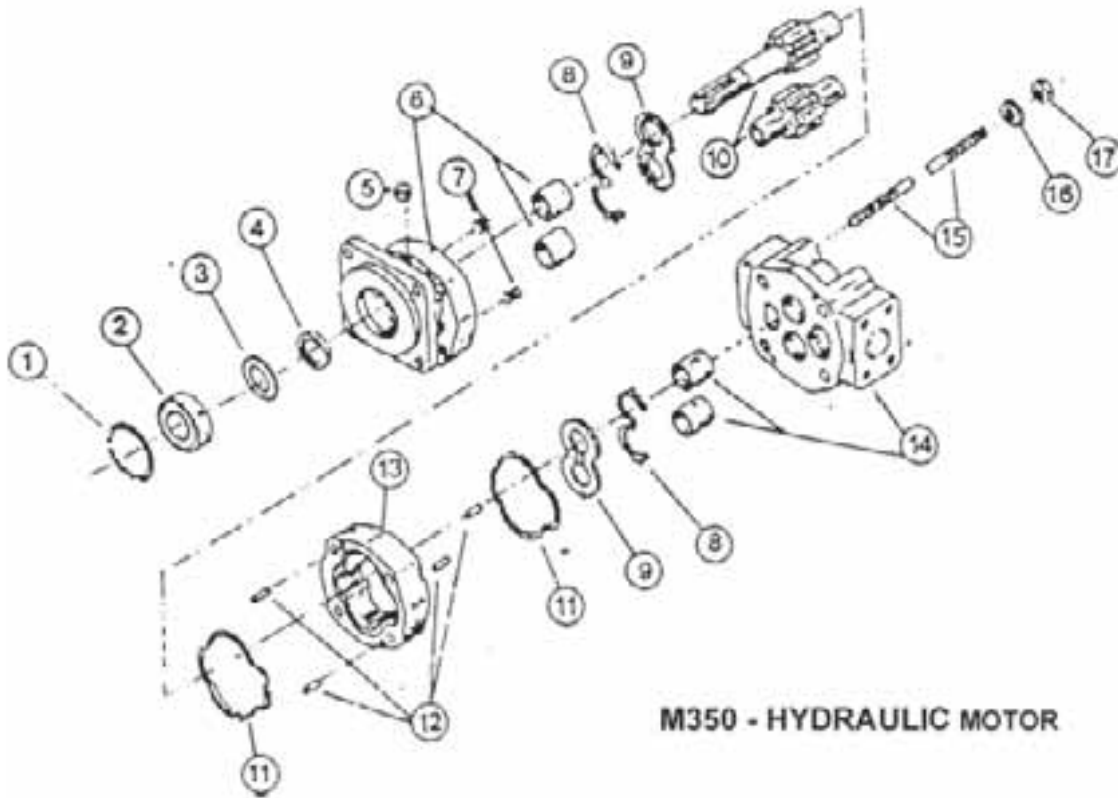


M350 - HYDRAULIC MOTOR

ITEM	P/N	QTY	DESCRIPTION
	23174	AVAIL	MOTOR ASSEMBLY COMPLETE
1	TF4401	1	SNAP RING
2	TF4402	1	BEARING
3	TF4406	1	SEAL RETAINER
4	TF4403	1	SEAL
5	TF4405	1	PLUG
6	TF4404	1	SHAFT END COVER
7	6T5209	2	CHECK ASSEMBLY
8	TF4407	2	CHANNEL SEAL
9	TF4400	2	THRUST PLATE
10	24044	SET	INTEGRAL SHAFT AND GEAR (1 3/4" GEAR)
11	TF4410	2	GASKET SEAL
12	TF4461	4	DOWEL PIN
13	24045	1	GEAR HOUSING
14	TF4413	1	PORT END COVER
15	TF4414	4	STUD
16	TF4415	4	WASHER
17	TF4416	4	NUT
	TF4417	AVAIL	SEAL KIT

9. PARTS


9.10. Side deck motor

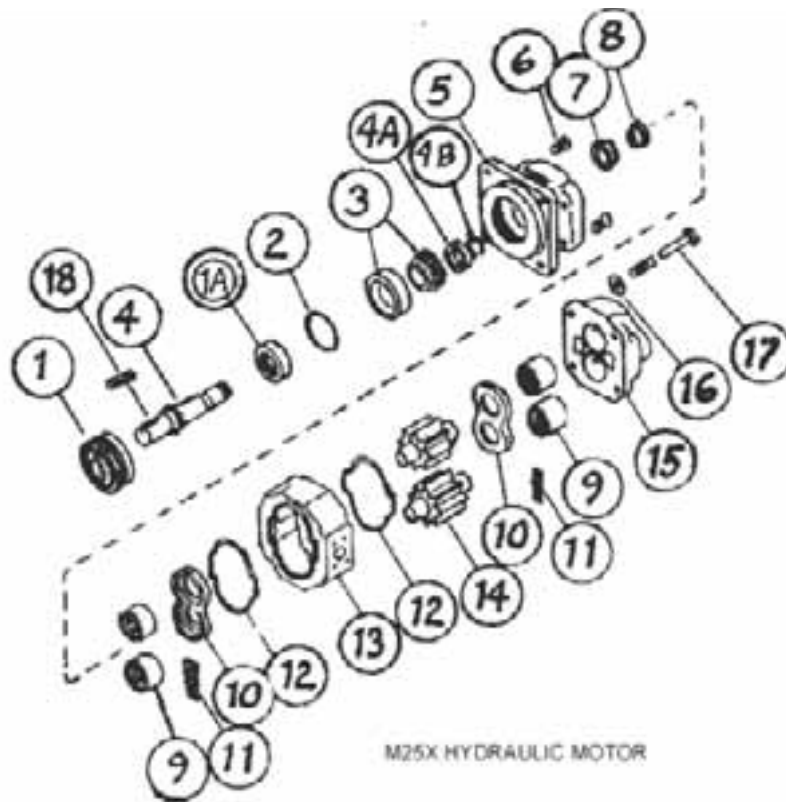

ITEM	P/N	QTY	DESCRIPTION
	TF1005	AVAIL	MOTOR ASSEMBLY COMPLETE
1	TF5000	1	SEAL RETAINER
1A	TF5002	1	MOTOR SHAFT SEAL
2	6T5003	1	O-RING
3	6T5004	1	TAPERED BEARING
4	TF5005	1	DRIVE SHAFT
4A	6T5006	1	SPACER
4B	6T5007	1	RETAINER RING
5	6T5008	1	SHAFT END COVER
6	6T5009	2	CHECK ASSEMBLY
7	6T5010	1	SHAFT BUSHING
8	6T5011	1	SPRING
9	6T5012	4	ROLLER BEARING
10	6T5013	2	THRUST PLATES
11	6T5014	1 STRIP	POCKET SEAL
12	6T5015	2	GASKET SEAL
13	6T5016	1	GEAR HOUSING 2 3/4"
14	6T5017	1 SET	MATCHED GEARS
15	6T5018	1	PORT END COVER
16	6T5019	4	WASHERS
17	6T5020	4	CAPSCREWS
18	6T5105	1	SHAFT KEY
	TF6321	AVAIL	SEAL KIT (INCLUDES ITEM 2, 2A, 7, 11, AND 12)

9. PARTS


9.11. Side deck motor– high pressure

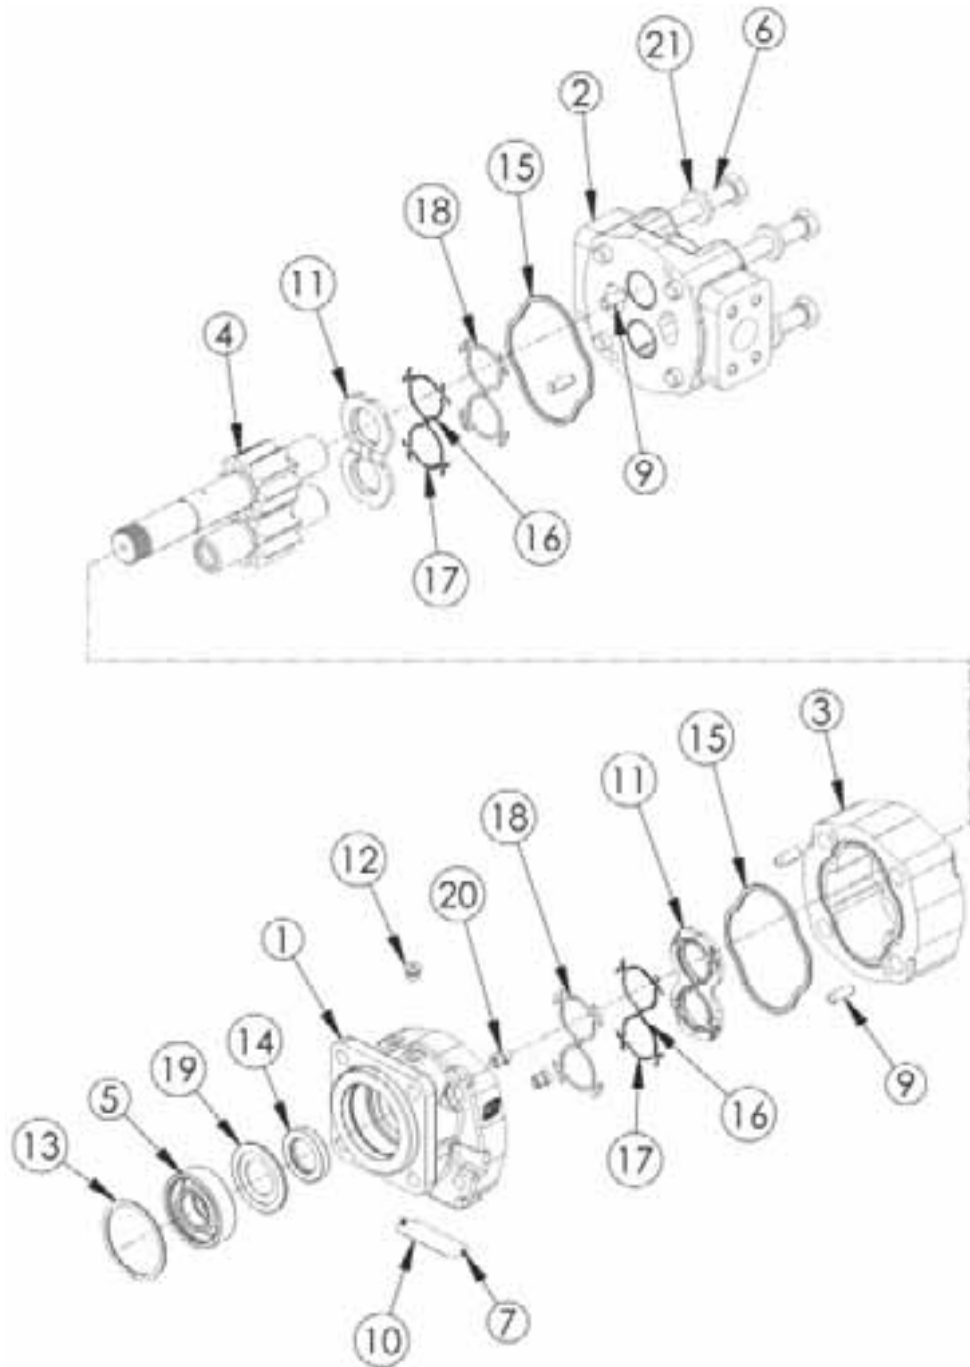

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	3000407	1/AH4L	MOTOR ASSEMBLY 2IN. TYP	1	3000407	1/AH4L	MOTOR ASSEMBLY 2IN. TYP STD DUTY
2	3000403	1	SHAFT END COVER	2	3000403	1	SHAFT END COVER
3	3000404	1	PORT END COVER	3	3000404	1	PORT END COVER
4	3000405	1	GEAR HOUSING	4	3000405	1	GEAR HOUSING
5	3000406	1	MATCHED GEAR SET	5	3000406	1	MATCHED GEAR SET
6	17442	1	BALL BEARING	6	17442	1	BALL BEARING
7	3000407	2	CAP SCREW	7	3000407	2	CAP SCREW
8	3000408	2	SET SCREW	8	3000408	2	SET SCREW
9	3000409	4	DOWEL PIN	9	3000409	4	DOWEL PIN
10	70379	1	NAMEPLATE	10	70379	1	NAMEPLATE
11	70379	2	THRUST PLATE	11	70379	2	THRUST PLATE
12	02361940	1	HEX PLUG	12	02361940	1	HEX PLUG
13	17443	1	SNAP RING	13	17443	1	SNAP RING
14	3000409	1	LIP SEAL (INCLUDED IN SEAL KIT)	14	3000409	1	LIP SEAL (INCLUDED IN SEAL KIT)
15	17442	2	GASKET SEAL (INCLUDED IN SEAL KIT)	15	17442	2	GASKET SEAL (INCLUDED IN SEAL KIT)
16	3000406	4	SIDE SEAL (INCLUDED IN SEAL KIT)	16	3000406	4	SIDE SEAL (INCLUDED IN SEAL KIT)
17	3000407	4	END SEAL (INCLUDED IN SEAL KIT)	17	3000407	4	END SEAL (INCLUDED IN SEAL KIT)
18	17442	2	BACK-UP SEAL (INCLUDED IN SEAL KIT)	18	17442	2	BACK-UP SEAL (INCLUDED IN SEAL KIT)
19	02361932	1	SEAL RETAINER	19	02361932	1	SEAL RETAINER
20	07089	2	CHECK ASSEMBLY	20	07089	2	CHECK ASSEMBLY
21	02361917	4	WASHER	21	02361917	4	WASHER
22	3000402	1/AH4L	SEAL KIT (INCLUDES 14, 15, 16, 17, AND 18)	22	3000402	1/AH4L	SEAL KIT (INCLUDES 14, 15, 16, 17, AND 18)

9. PARTS

9.12. Flail assembly

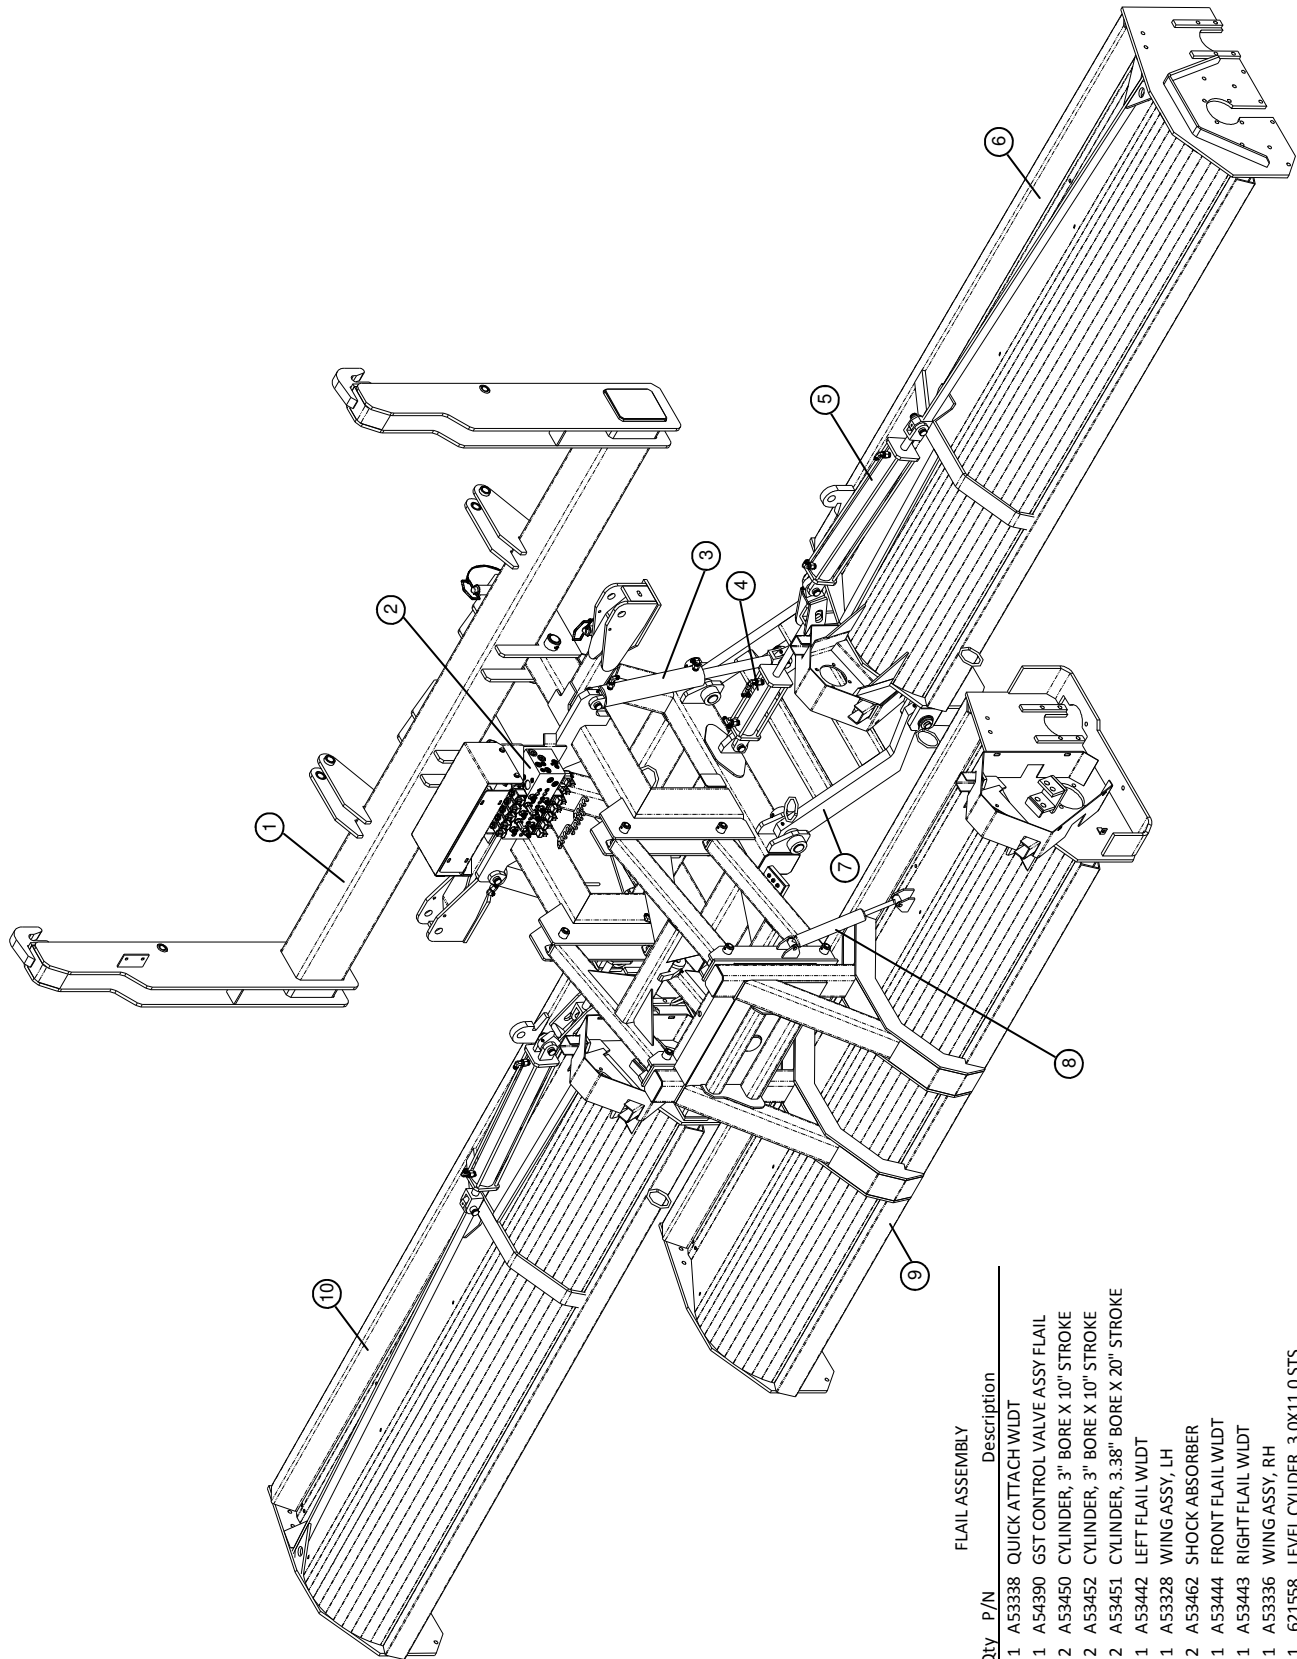

Det	Qty	P/N	Description
			FLAIL ASSEMBLY
1	1	A53338	QUICK ATTACH WLDT
2	1	A54390	GST CONTROL VALVE ASSY FLAIL
3	2	A53450	CYLINDER, 3" BORE X 10" STROKE
4	2	A53452	CYLINDER, 3" BORE X 10" STROKE
5	2	A53451	CYLINDER, 3.38" BORE X 20" STROKE
6	1	A53442	LEFT FLAIL WLDT
7	1	A53328	WING ASSY, LH
8	2	A53462	SHOCK ABSORBER
9	1	A53444	FRONT FLAIL WLDT
10	1	A53443	RIGHT FLAIL WLDT
NS	1	A53336	WING ASSY, RH
NS	1	621558	LEVEL CYLINDER, 3.0X11.0 STS

9. PARTS

9.13. Flail assembly

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.

9. PARTS

9.1.



PARTS ORDER FAX

FAX
24 hours a day
7 days a week*

Phone 1 (800) 247-4885 Fax 1 (515) 532-3553 Photocopy and fax to Hagie Customer Support Department

ORDERED BY/ BILL TO: Name: _____ Co. Name: _____ Street: _____ City, State, Zip: _____ Phone: _____ Fax: _____	SHIP TO: Name: _____ Co. Name: _____ Street: _____ City, State, Zip: _____ Phone: _____ Fax: _____
---	---

HOW TO SHIP:

UPS Ground
 Next Day
 2 Day
 3 Day
 Other: _____

If "HOW TO SHIP" is left blank, parts will be shipped UPS Ground service. If the part is over 150 pounds, an independent motor carrier will be used.

PAYMENT: <input type="checkbox"/> Hagie Account # ** : _____ <input type="checkbox"/> C.O.D	<input type="checkbox"/> American Express <input type="checkbox"/> Discover <input type="checkbox"/> Visa <input type="checkbox"/> Master Card Signature: _____ Name as it appears on card: _____ Card #: _____ Exp. Date: _____
---	--

Year and Model #: _____ Serial #: _____

Item Serial # (if necessary): _____

Engine (inclde type): _____

Hydrostatic Pump(s): _____

Wheel Hubs: _____ LF RF LR RR

Wheel Motors: _____ LF RF LR RR

Hagie Part #	Qty.	Description

Check here if you want phone confirmation of parts order.

* Orders received before 3:00 p.m., CST, will be processed the same business day.
Regular business hours are Monday through Friday, 7:00 a.m. through 5:00 p.m.

** If you do not have a Hagie account number, contact the Hagie Customer Service Department and you will be issued one.



PARTS ORDER FAX

FAX
24 hours a day
7 days a week*

Phone 1 (800) 247-4885 Fax 1 (515) 532-3553 Photocopy and fax to Hagie Customer Support Department

ORDERED BY/ BILL TO: Name: _____ Co. Name: _____ Street: _____ City, State, Zip: _____ Phone: _____ Fax: _____	SHIP TO: Name: _____ Co. Name: _____ Street: _____ City, State, Zip: _____ Phone: _____ Fax: _____
---	---

HOW TO SHIP:

UPS Ground Next Day 2 Day 3 Day Other: _____

If "HOW TO SHIP" is left blank, parts will be shipped UPS Ground service. If the part is over 150 pounds, an independent motor carrier will be used.

PAYMENT:

<input type="checkbox"/> Hagie Account # ** : _____	<input type="checkbox"/> American Express <input type="checkbox"/> Discover
<input type="checkbox"/> C.O.D	<input type="checkbox"/> Visa <input type="checkbox"/> Master Card

Signature: _____
Name as it appears on card: _____
Card #: _____ Exp. Date: _____

Year and Model #: _____ Serial #: _____

Item Serial # (if necessary):

Engine (inclde type): _____

Hydrostatic Pump(s): _____

Wheel Hubs: _____ LF RF LR RR

Wheel Motors: _____ LF RF LR RR

Hagie Part #	Qty.	Description

Check here if you want phone confirmation of parts order.

* Orders received before 3:00 p.m., CST, will be processed the same business day.

Regular business hours are Monday through Friday, 7:00 a.m. through 5:00 p.m.

** If you do not have a Hagie account number, contact the Hagie Customer Service Department and you will be issued one.

DAILY MAINTENANCE SCHEDULE

The following services should be performed **daily** or every **8 hours** of service, following the detailed maintenance instructions in the operators manual.

_____ Pivot Points: Inject grease until it appears at ends.

_____ Hydraulic Fittings: Check for leaks with paper or cardboard.
Tighten fitting or replace hoses immediately.

_____ Knives: Inspect for missing or damaged knives, change (only complete sets) as needed.

_____ Belts: Check, tighten, replace belts as needed.

_____ Main Frame/ Deck: Unless otherwise specified, retorque bolts according to torque specifications in operators manual.

_____ Cutter Shaft and Ground Roller: Grease as instructed in the detail maintenance section.

Service performed by: _____ Date: ____/____/____

Hour meter reading: _____

Please record any notes on the back of this page.

NOTES:

