

## InCommand™ Version 2.2 Firmware Release

Ag Leader Technology is pleased to announce the release of new firmware. Features and improvements in this version are listed below. This free upgrade is available for download from <http://www.agleader.com>.

### **IMPORTANT!**

- A. It is recommend that a backup be created prior to upgrading display firmware

## New in 2.2

### General

- **NEW:** Map screen indicates vehicle icons for other machines using DisplayCast
- **NEW:** Indication of active guidance lines other machines are using with DisplayCast
- **FIXED:** Importing installed tile lines for visual reference from SMS

### Planting

- **NEW:** Advanced seed tube monitoring for popcorn seed
- **ENHANCED:** Flexibility when configuring split-rows using row by row downforce

## New in 2.1

### General

- **FIXED:** Display powers on in service mode screen, and user has to reload operation to the map screen. This process continues if shutdown when logged into AgFiniti.

## New in 2.0

### General


- **NEW:** DisplayCast™ Feature Unlock. Share information between all InCommand displays: Coverage maps for AutoSwath, Guidance lines, Grower/Farm/Fields, Configurations, Products and all as-applied maps. (Requires AgFiniti Essentials License)
- **ENHANCED:** Steering engage and dis-engage audible notification
- **ENHANCED:** Ability to create New Event in all operations instead of using Clear Map button


### SeedCommand

- **NEW:** Support for upgrading SureDrive modules

## Instructions for updating:

1. Copy the latest upgrade file to your external USB drive. It will have a .fw3 file extension.
2. Insert the external USB drive in the display

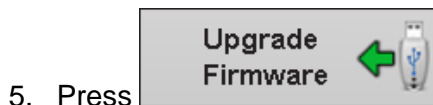

8. Display will process the file and ask “The upgrade is ready to install. Would you like to continue?” Press 

9. Display will cycle power automatically

10. The display upgrade will progress through 100% and then automatically power cycle.

The upgrade is now complete